

Addendum to the Instruction for Use of the MAJ-209 Handling instructions for preventing the breakage of MAJ-209

Model Name	Instruction for Use	Affected LOT No.	
		LOT No. on the carton box	LOT No. on the sterile pack
MAJ-209 Single-Use Suction Valve	Article No.: 028987	88H	H8807 to H8816
		89H	H8901 to H8917
		8XH	H8X01 to H8X22
		8YH	H8Y01 to H8Y21
		8ZH	H8Z01 to H8Z19
		91H	H9101 to H9106

I. Which movement of the MAJ-209 suction valve tube has to be avoided in order to prevent valve breakage?

- An upward lifting of the suction valve's main body pipe away from the endoscopes has to be avoided.



II. How can users control the situation?

- The user can control the situation and avoid breakage by following the three movement rules described below:



1

Attaching and detaching the suction tube only with pushing- /pulling-force in direction of the suction valve.



2

With attached suction tube: While using rotation movement **avoid pulling the attached tubing**. Assure to have **sufficient tube length** available in order to avoid pulling forces to the suction valve's main body pipe.



3

Disconnect the suction valve after the procedure with a clock-wise turn and slight pressure on the suction valve's main body pipe in direction of the scope (contrary movement to the one that would lead to breakage).

III. How can the broken MAJ-209 valve be removed from the bronchoscope?

- In order to allow removal of the remaining suction body, for example a small screw-driver or scissor can be inserted into the ruptured tube opening of the suction valve. A clock-wise turn will then remove the broken valve from the bronchoscope/other endoscopes.



- Please take measures to ensure a quick removal of a broken valve can be done and have sufficient quantities (at least one) of the MAJ-209 available for replacement.

This document is to be retained with the Instructions for Use of the MAJ-209.